

ACIDE PERACETIQUE 0-500PPM BTE 100 BANDELETTES


Référence

0299005

Peracetic Acid Test Strip, 500ppm

1. Remove one test strip from the vial, being careful not to touch the test pad with your fingers.
2. Gently swirl test strip in small sample of solution being tested for 2 seconds.
3. Remove strip with pad face up. Do not shake off excess sample.
4. Compare the test pad to the color chart after 10 seconds.

0 ppm

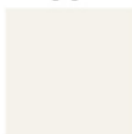

100 ppm



250 ppm



500 ppm



NOTE: If the strips are turning yellow in color, it is possible that the concentration of Peracetic Acid is too high.

Ces spécifications ne peuvent être considérées que comme des informations générales et ne dispenseront pas l'utilisateur de son obligation de s'assurer que le produit est adapté pour l'utilisation prévue. En cas de doute, veuillez nous contacter.

FT 0299005

avril 24