

NITRATE 0-500PPM ET NITRITE 0-25PPM BTE 50


Référence

0299010

Nitrite Nitrate Test Strip

1. Remove one Nitrite Nitrate test strip from the vial.
2. Dip the test strip into the solution so that both pads are immersed and hold for 2-3 seconds in the solution.
3. Remove the test strip, and shake off any excess liquid.
4. Compare test pad to the color chart after 30 seconds.

Note: The unit of measure is as nitrite, not nitrite-nitrogen.

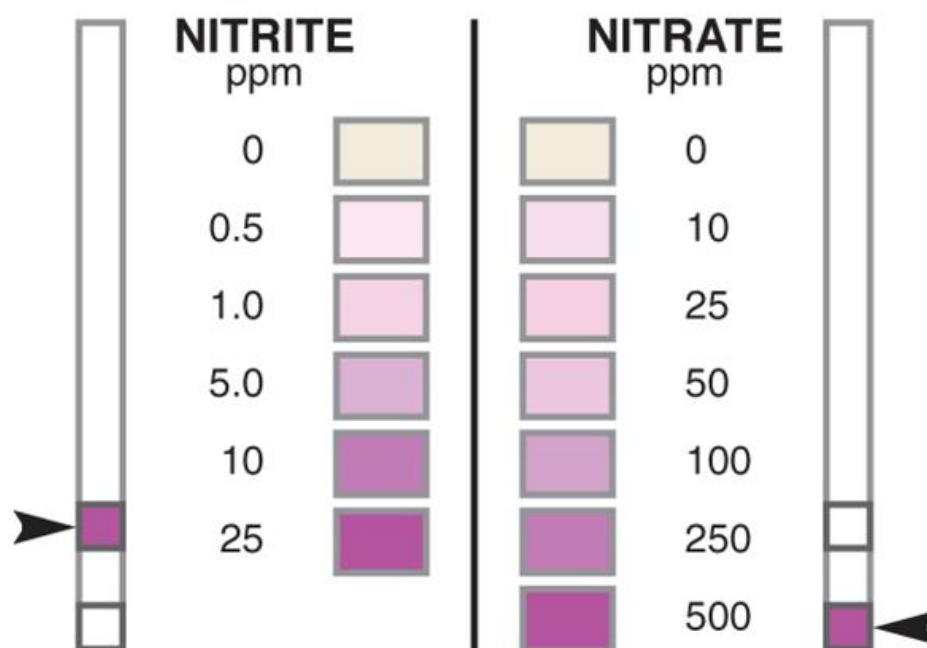

Ces spécifications ne peuvent être considérées que comme des informations générales et ne dispenseront pas l'utilisateur de son obligation de s'assurer que le produit est adapté pour l'utilisation prévue. En cas de doute, veuillez nous contacter.

FT 0299010

avril 24